


SEQUENZE DI MONTAGGIO

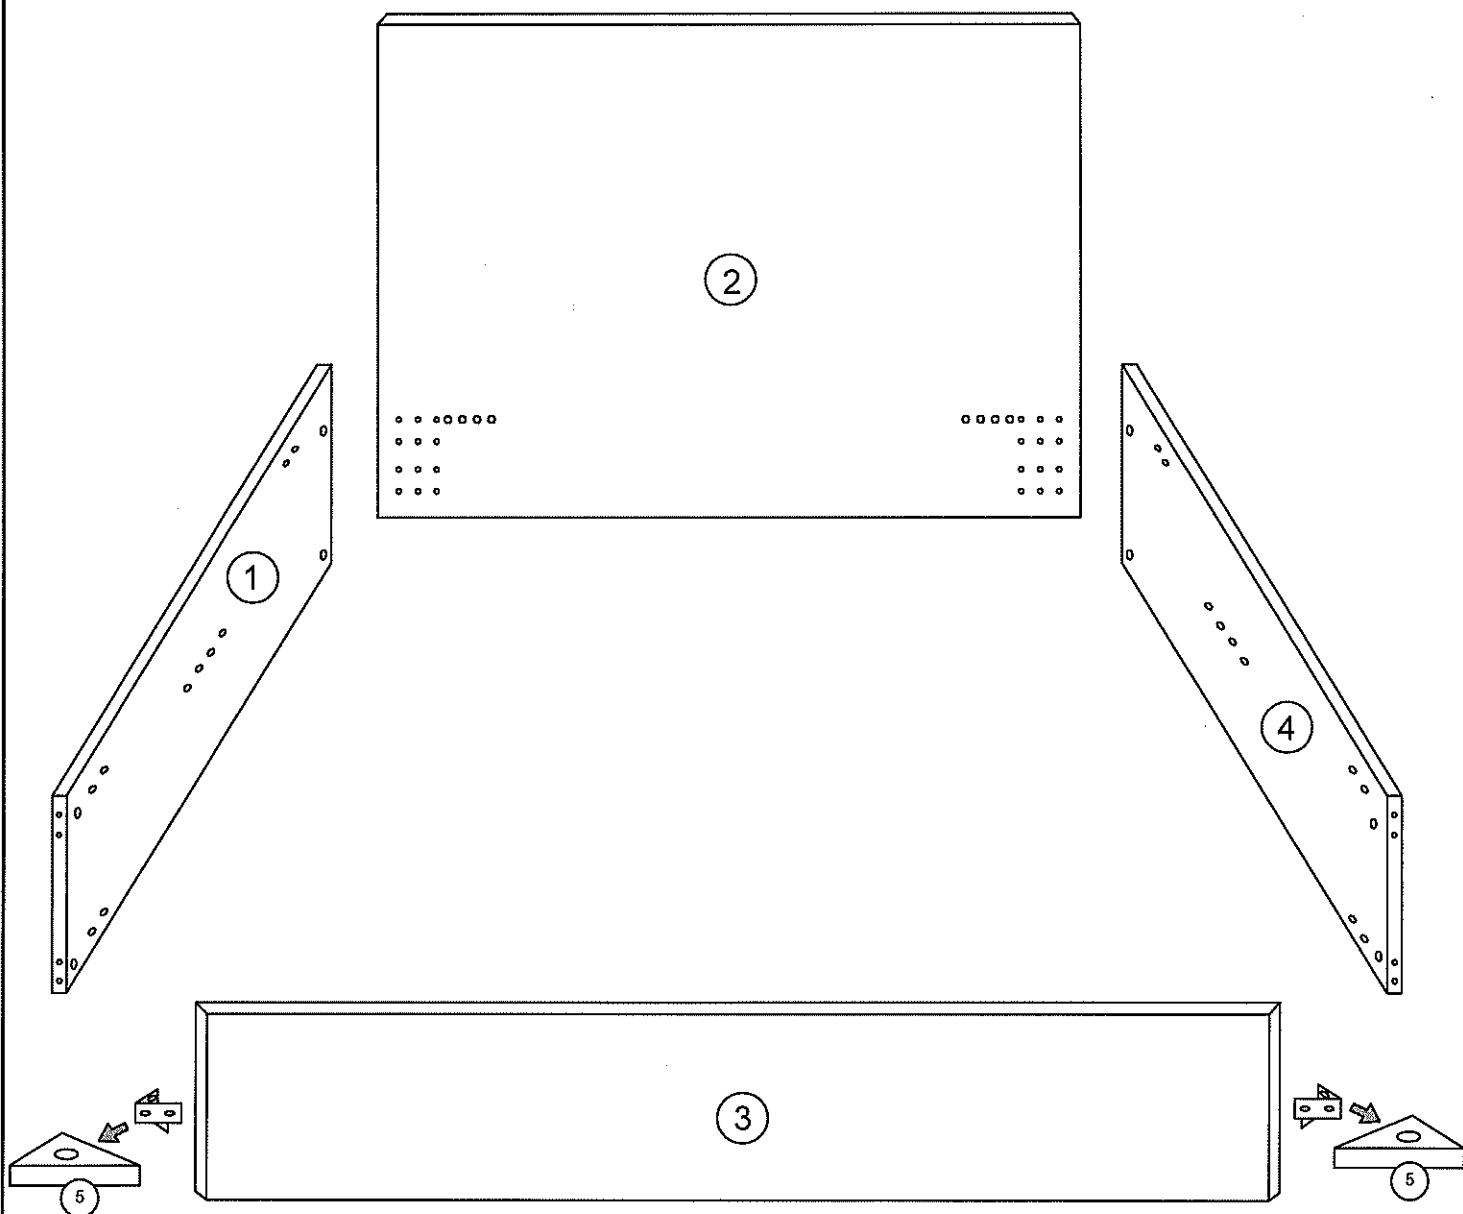


① Fascioni sinistro
Long pan droit
Bed side right

② Testiera letto
Tet du lit
Bed head






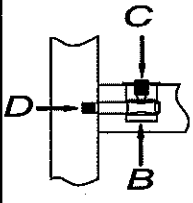

③ Pediera letto
Pied du lit
Bed food

④ Fascione destro
Long pan gauche
Bed side left

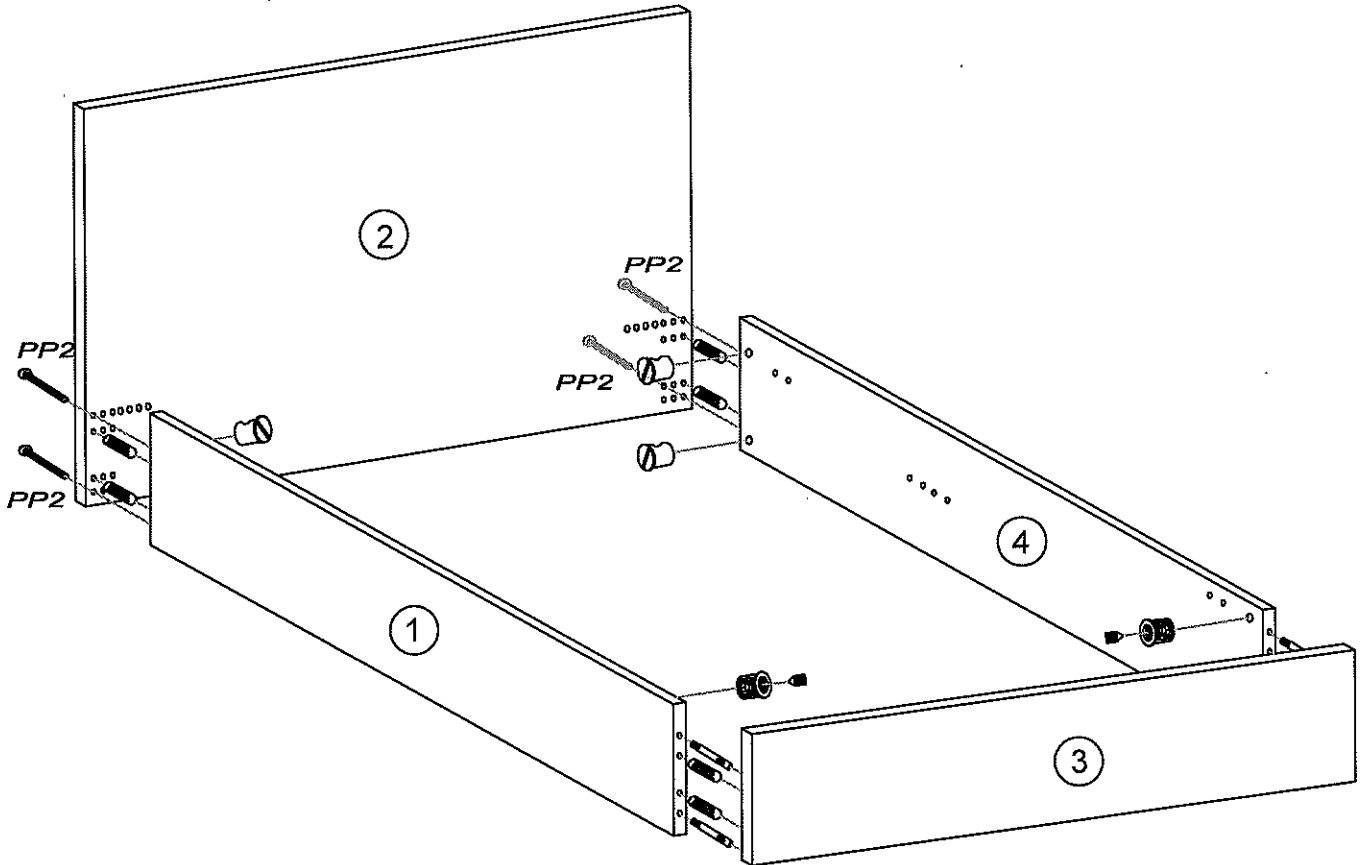⑤ Staffe
Supports
Bracket



Quincallerie Beschläge Hardware


 <p>CCX4</p>	 <p>DX4</p>	 <p>BX4</p>	 <p>CX4</p>	 <p>AX8</p>		 <p>Vite tbt 6max50 PP2 X 4</p>	
---	--	--	--	--	--	--	--

MOD. OXFORD

LETTO OXFORD

NOTICE DE MONTAGE
ASSEMBLING INSTRUCTIONS
MANTAGEANLEITUNG
ISTRUZIONI DI MONTAGGIO

NO STORAGE

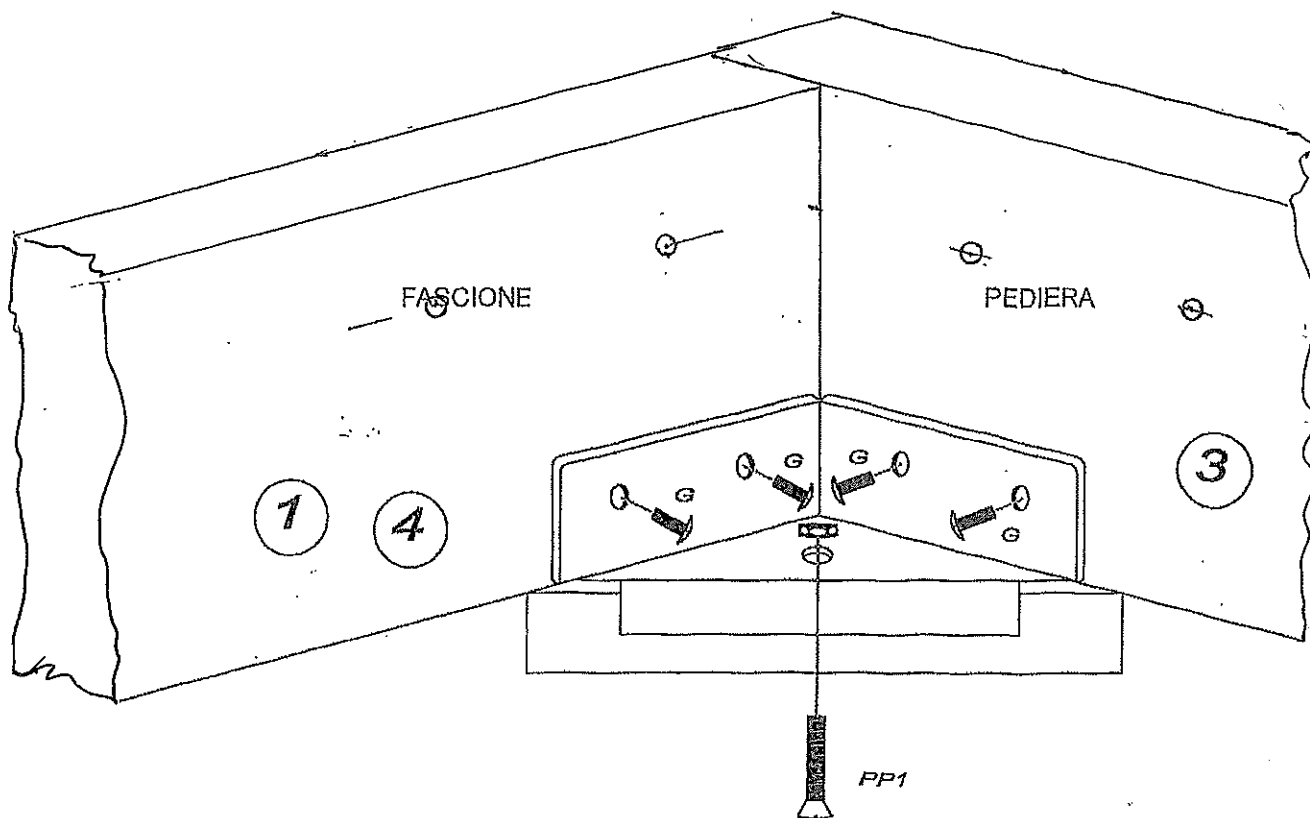

Quincaillerie Beschlage Hardware

G X 8



Vite tbi 8 MA x15



PP1 X 2




Vite tps 4 MA x25

Instruction de montage - ARMOIRE 4-PORTES
Technical instructions - WARDROBE 4-DOORS
Montageschema - KLEIDERSCHARNK 4-TUERIG

Mod. OXFORD

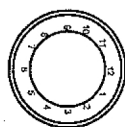



MADE IN ITALY

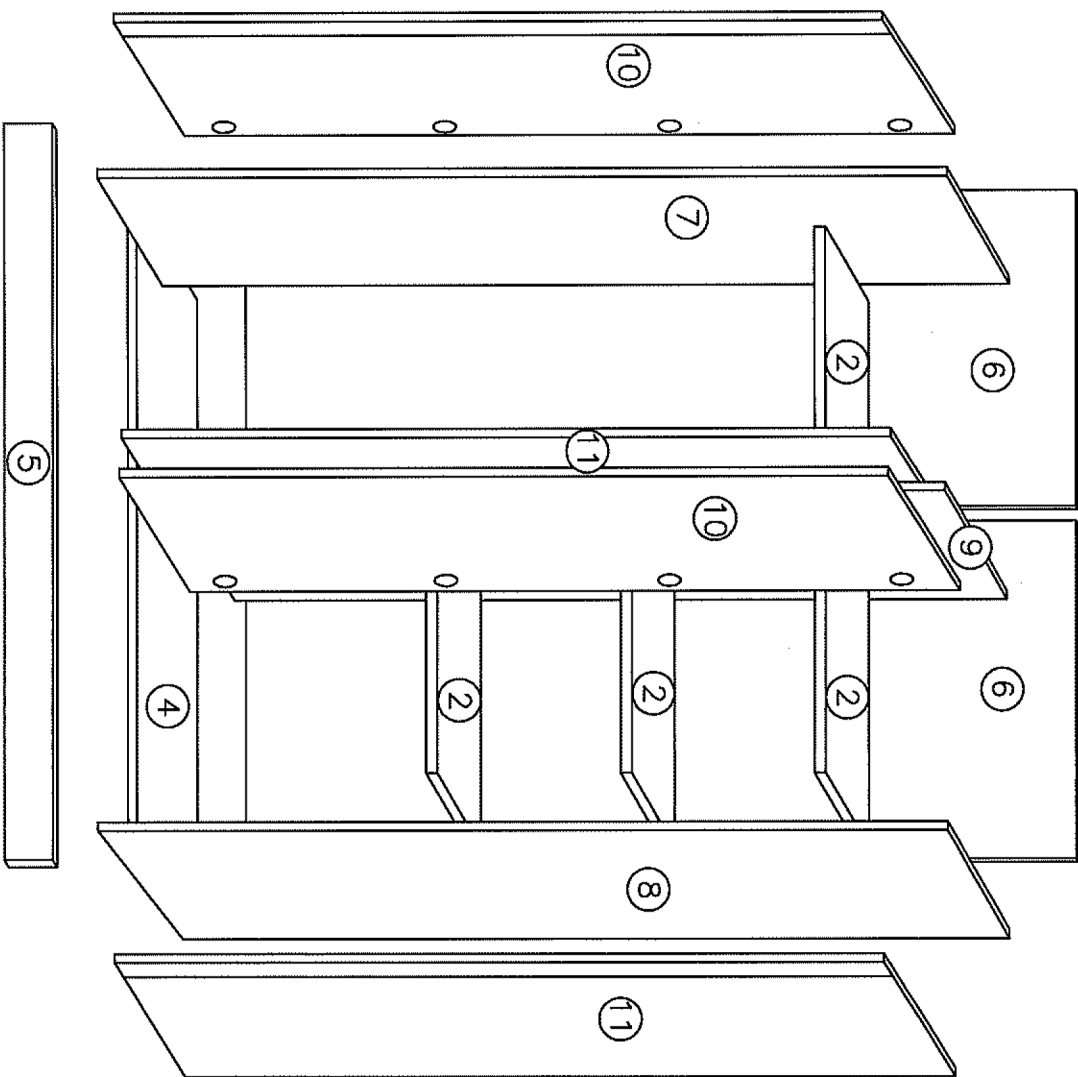

Instruction de montage - ARMOIRE 4-PORTES
 Technical instructions - WARDROBE 4-DOORS
 Montageschema - KLEIDERSCHARNIK 4-TUERIG

Mod. OXFORD

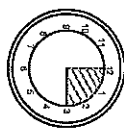

15 Min.






MADE IN ITALY

CHECKLISTE BESCHLÄGE

Kode	S	P3
ARTIKEL		
Menge	16	3

PP2		Z	
tbl 8ma X 40	1		



D		E	

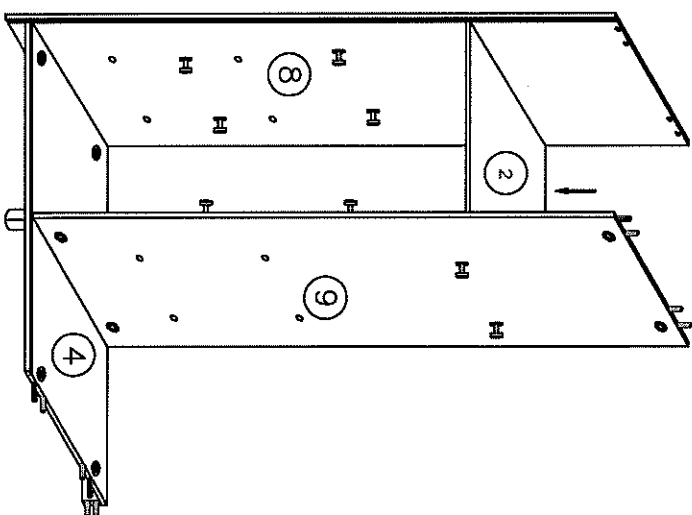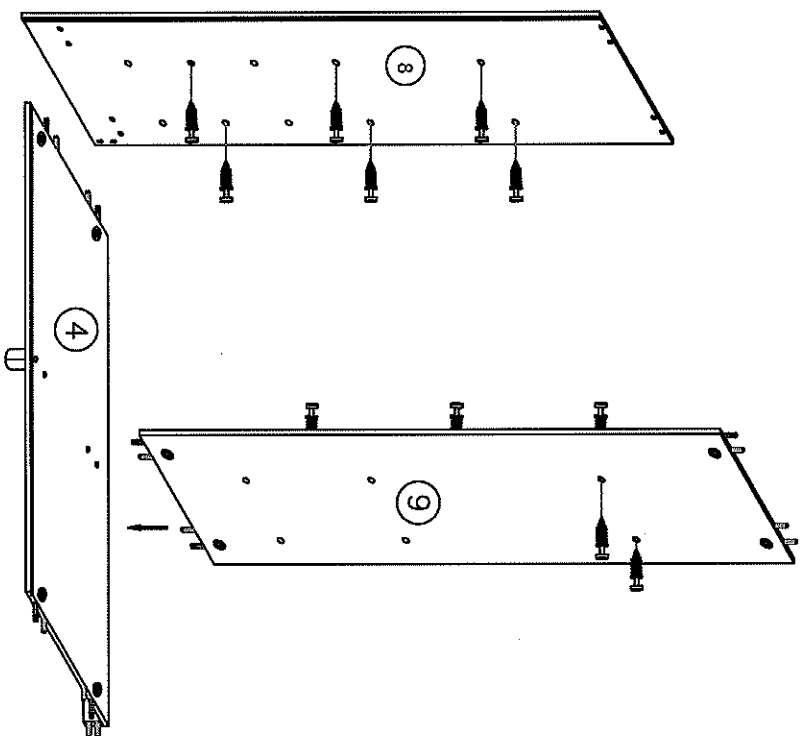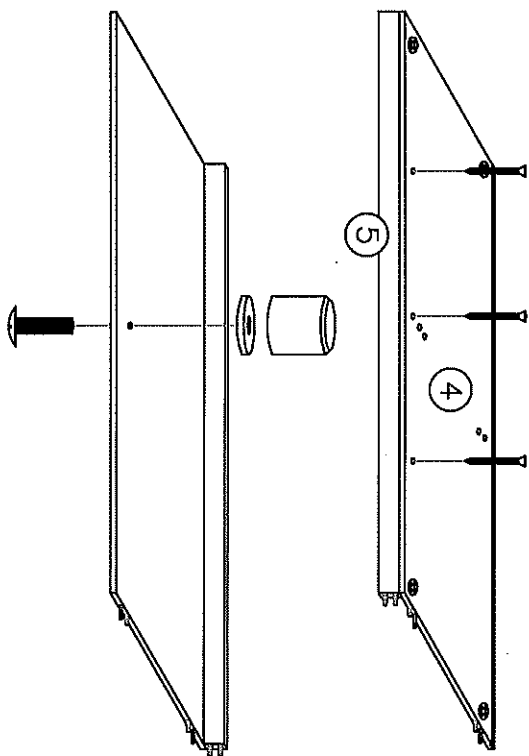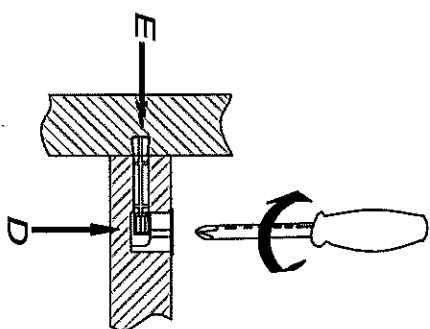

MASSITAB

Instruction de montage - ARMOIRE 4-PORTES
 Technical instructions - WARDROBE 4-DOORS
 Montageschema - KLEIDERSCHARNK 4-TUERIG

Mod. OXFORD

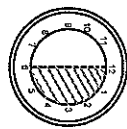


30 Min.

MADE IN ITALY



CHECKLISTE BESCHLÄGE

Kode	P1	Y
ARTIKEL		
Menge	10 tps 3,5 X 15	10



W		K	
20			



MASSITAB

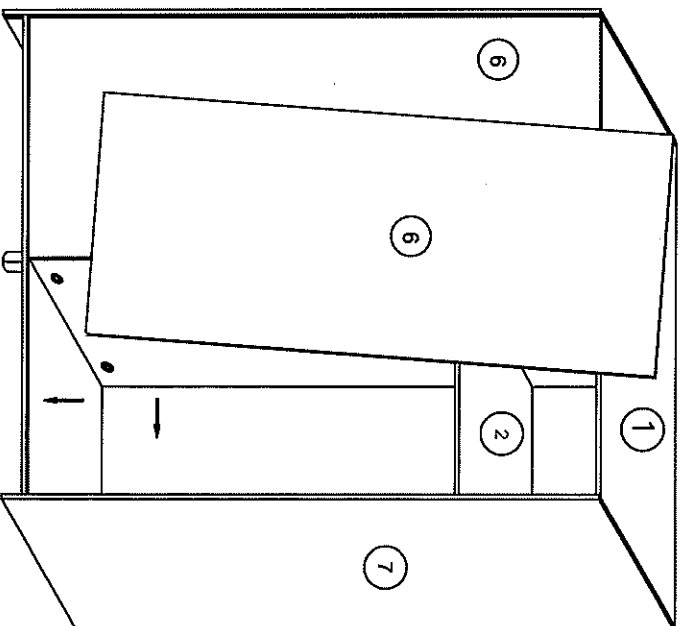
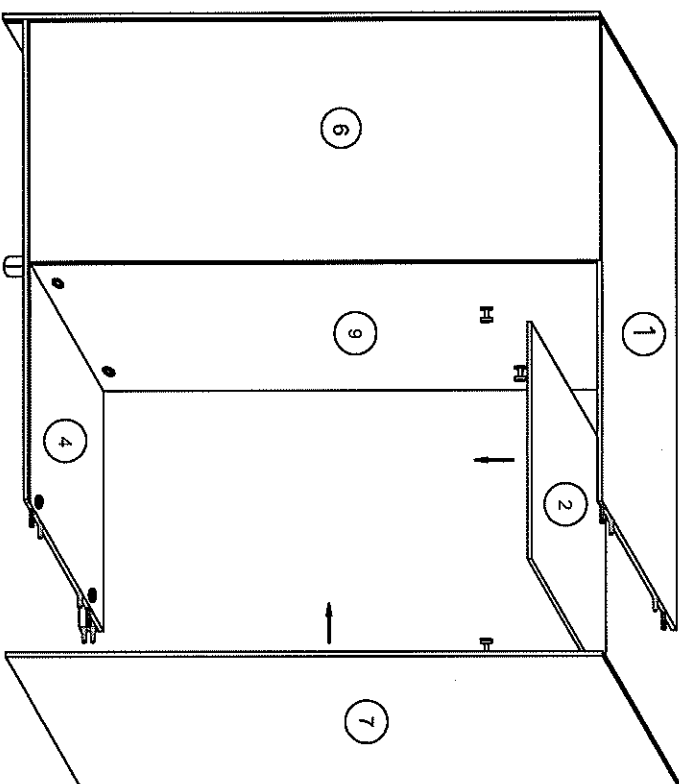


Zoom 1

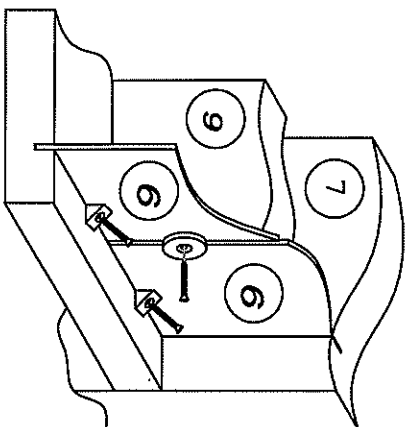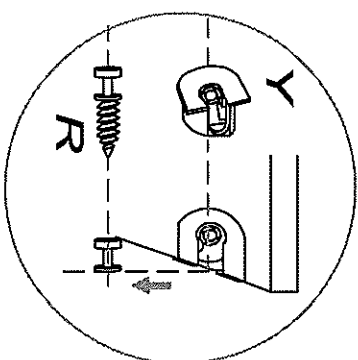

Instruction de montage - ARMOIRE 4-PORTES
 Technical instructions - WARDROBE 4-DOORS
 Montageschema - KLEIDERSCHARNK 4-TUERIG

Mod. OXFORD

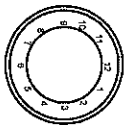

MADE IN ITALY




CHECKLISTE BESCHLÄGE

Kode	T	P1
ARTIKEL		
Menge	16	32
		tps 3,5 X 15

J		PP3
2		tbl 6 ma X 25





MASSITAB

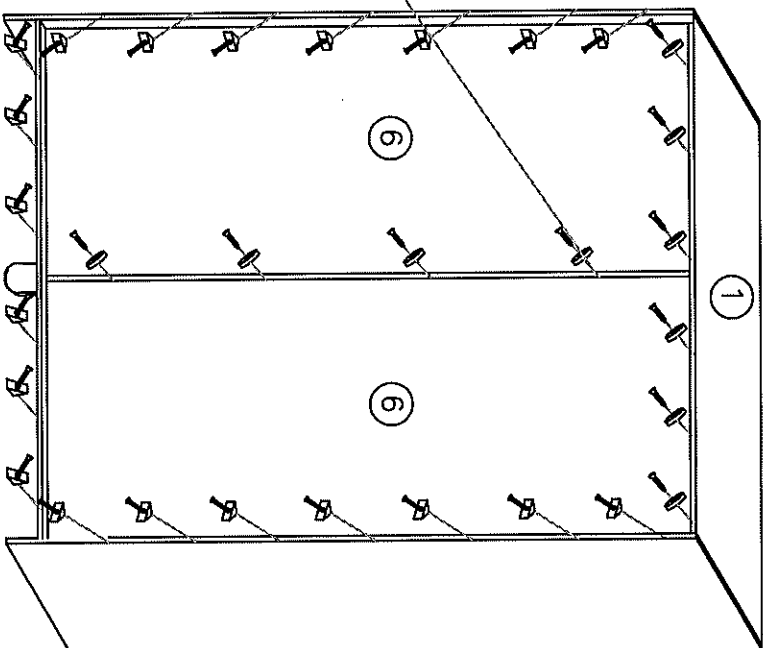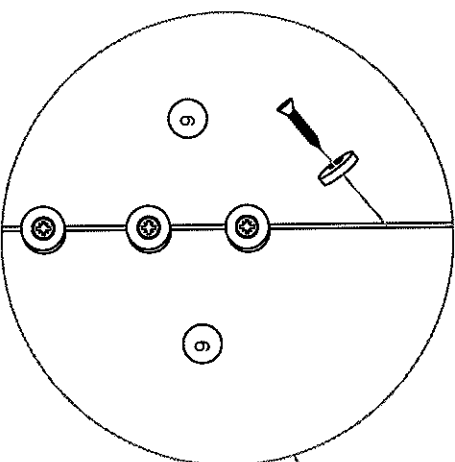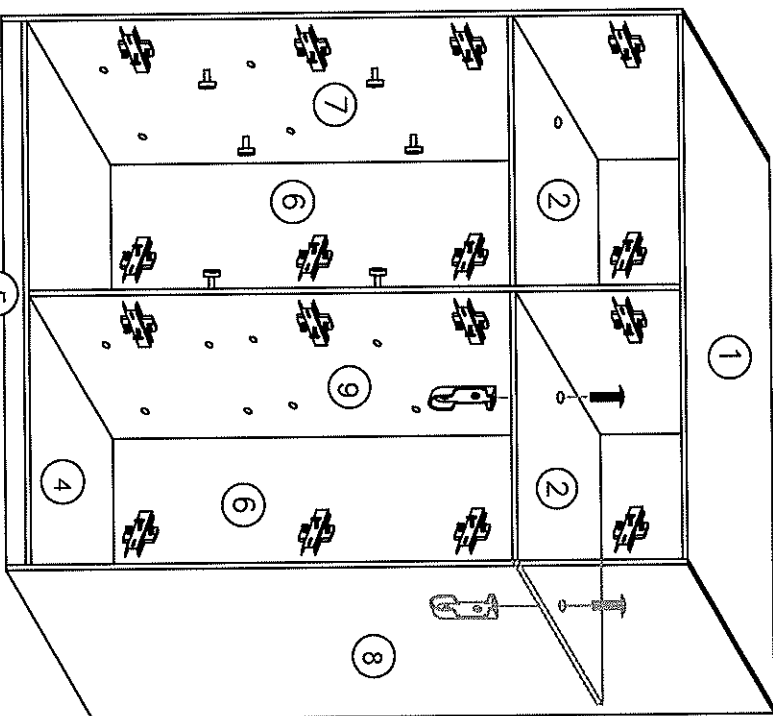

Instruction de montage - ARMOIRE 4-PORTES
 Technical instructions - WARDROBE 4-DOORS
 Montageschema - KLEIDERSCHARNK 4-TUERIG

Mod. OXFORD

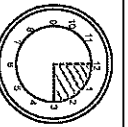



15 Min.

MADE IN ITALY

CHECKLISTE BESCHLÄGE

Kode		
ARTIKEL		
Menge		



0		1		2		3		4		5		6		7		8		9	

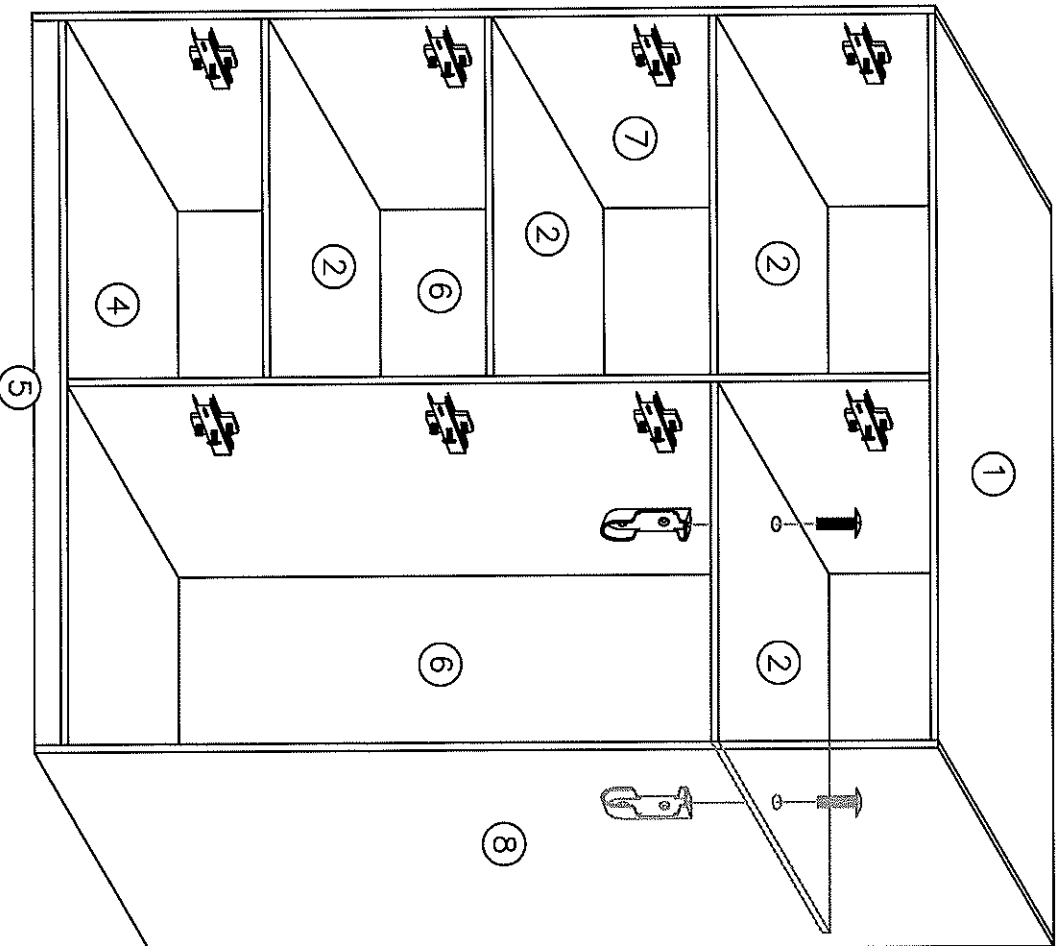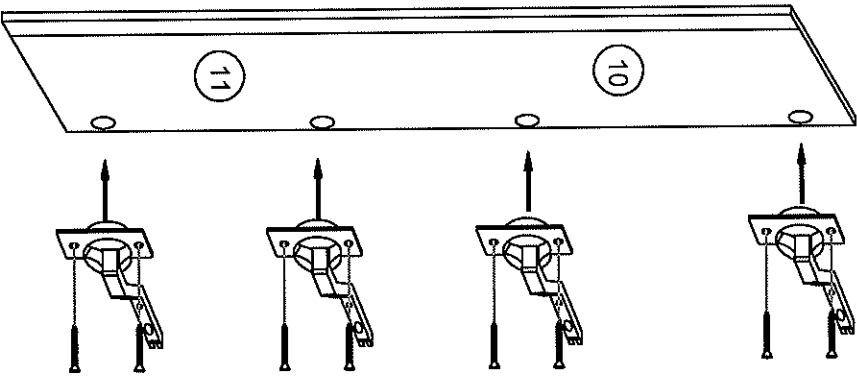

MASSITAB

Instruction de montage - ARMOIRE 4-PORTES
 Technical instructions - WARDROBE 4-DOORS
 Montageschema - KLEIDERSCHARNK 4-TUERIG


Mod. OXFORD

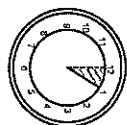





5 Min.

MADE IN ITALY

CHECKLISTE BESCHLÄGE

Kode	P2	
ARTIKEL		
	4ps 3,5 X 30	
Menge	9	

0	1	2	3	4	5	6	7	8	9

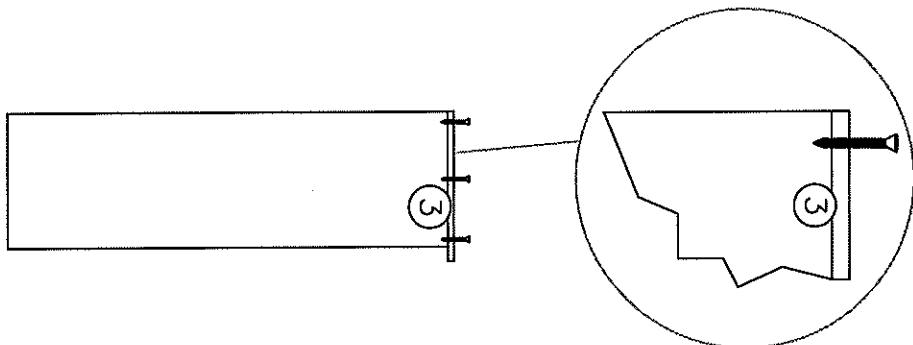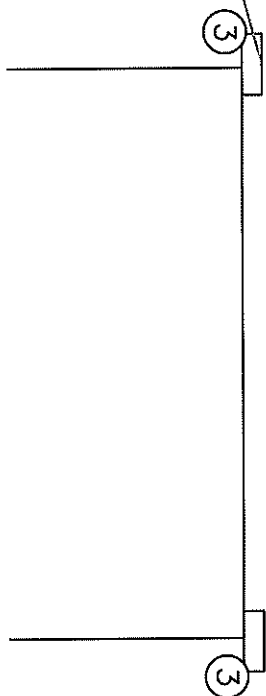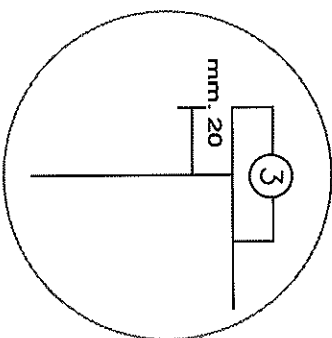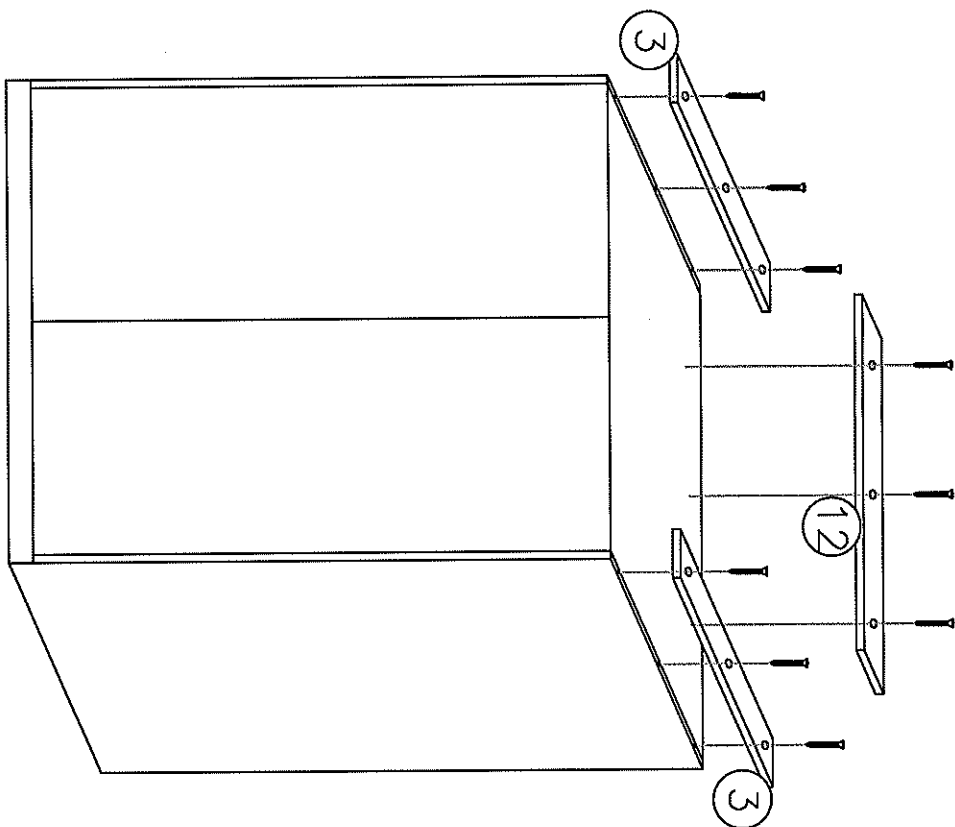

MASSITAB